

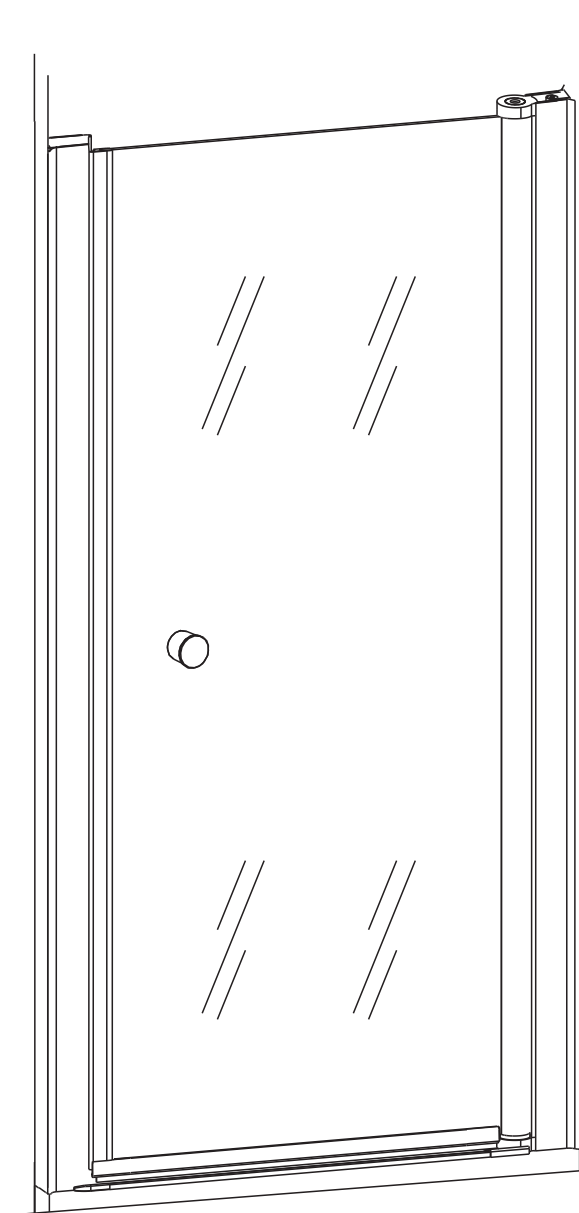
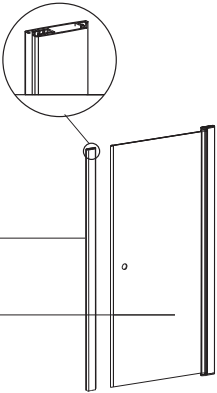




Návod na inštaláciu sprchových dverí Sanovo T1.




NO.	Designation	Pieces	NO.	Designation	Pieces
		X1 X1		 $\phi 8$  $\phi 3.2$	
			9		X1
			10		X1
			11.1 11.2 11.3 11.4		X1 X1 X1 X1
			12		X1
3.1		X1	13	A.1 A.2	X1 X1
3.2		X1		B.1 B.2 B.3 B.4	X2 X2 X1 X1
4.1		X1		C.1 C.2 C.3 C.4 C.5 C.6	X1 X2 X2 X4 X1 X1
4.2		X1		D.1 D.2 D.3 D.4 D.5 D.6	X2 X2 X1 X4 X2 X1
5	 $\phi 8$	X6+1		14.1 14.2	X1 X1
6	 ST4X35	X6+1		15	X1
7	 ST4X10	X4+1			
8		X4+1			

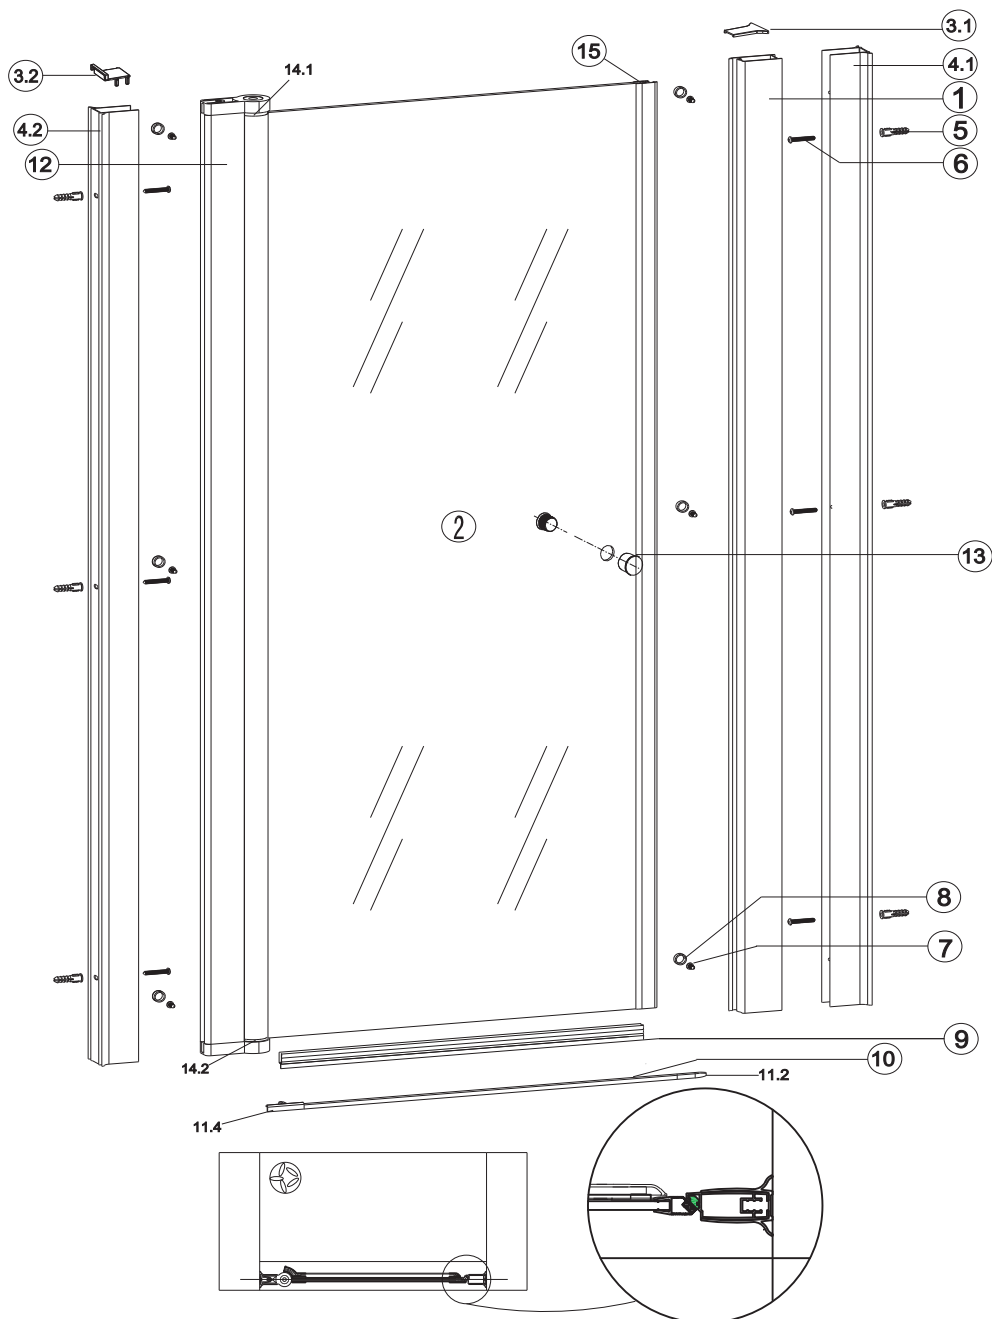


L01

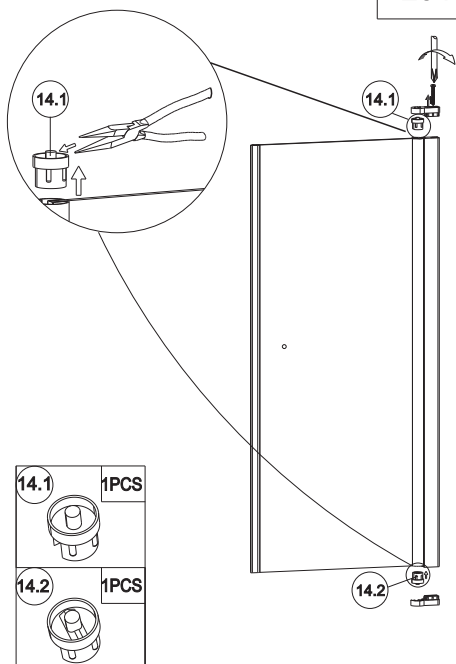


L02

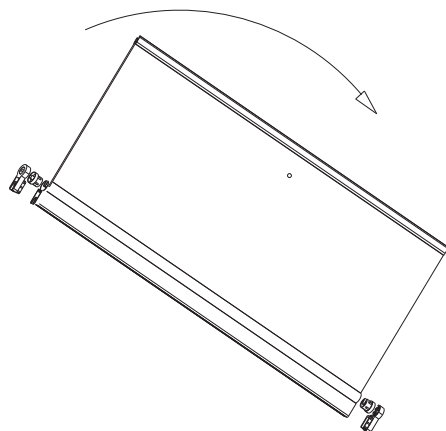


L03

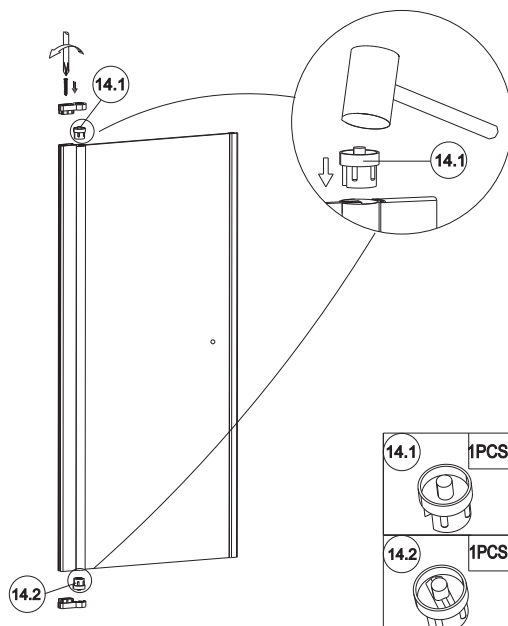


L04

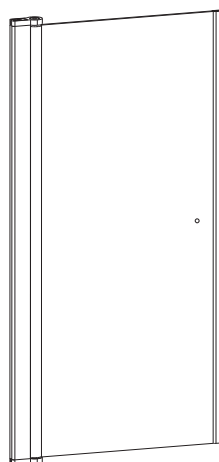


01

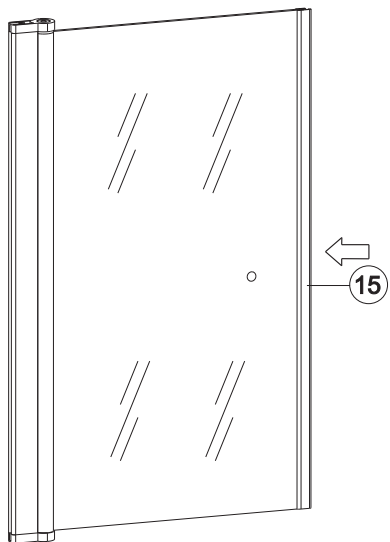


02

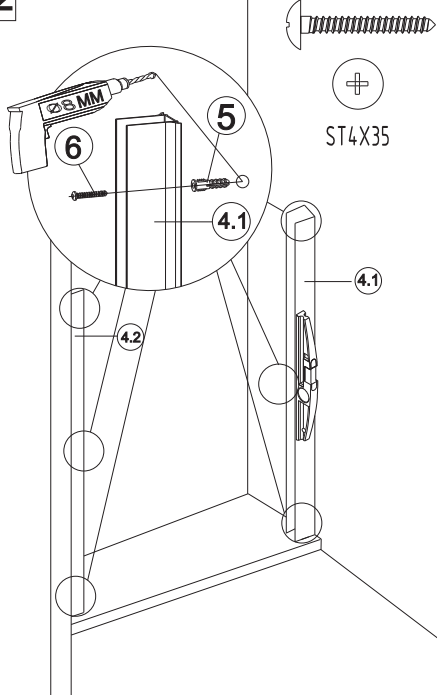


03

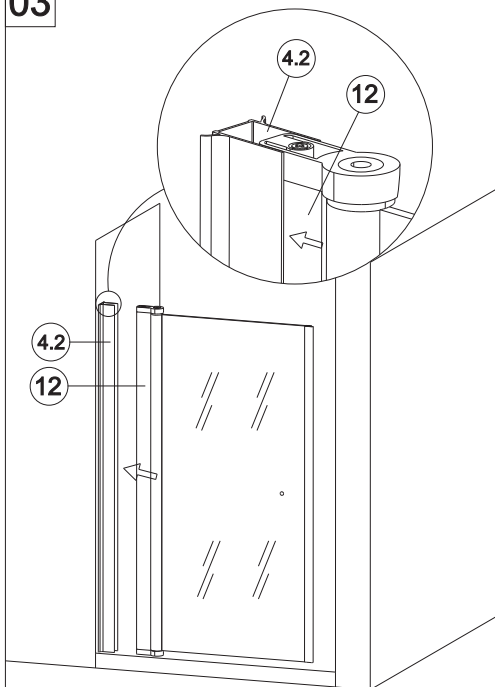


04

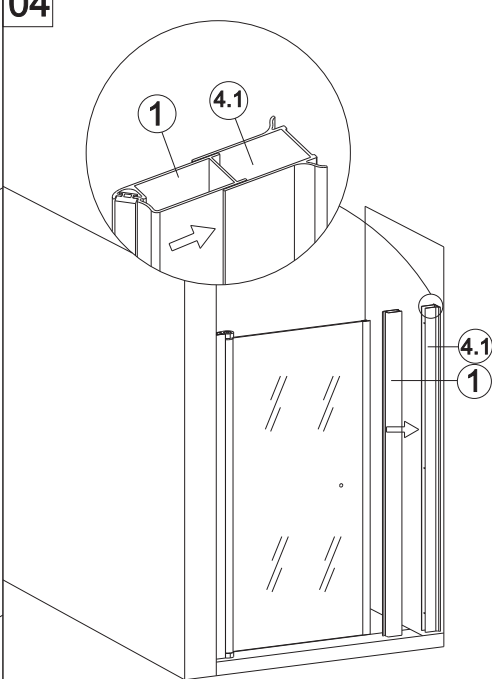






05

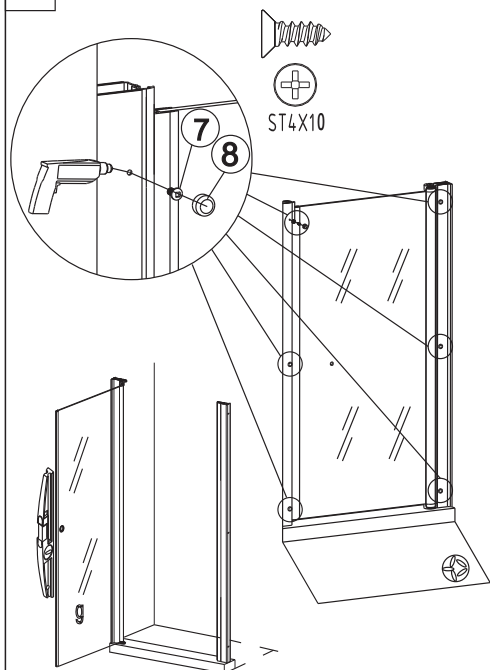

06

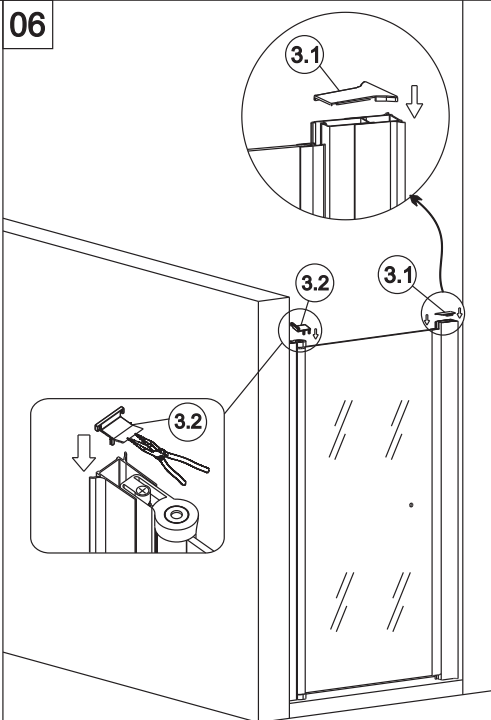

07

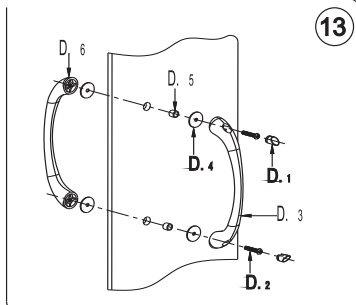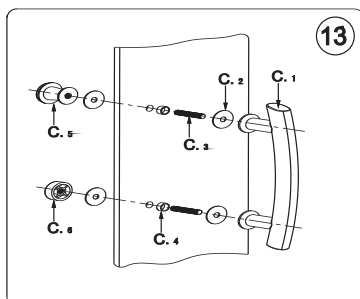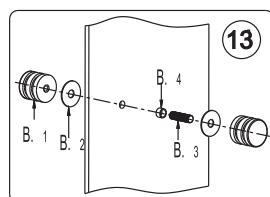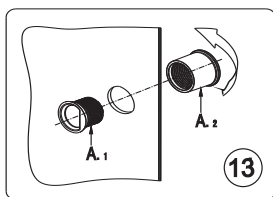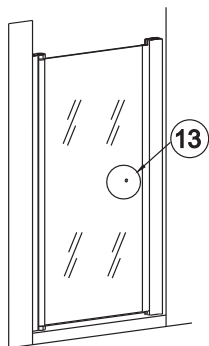

08

